




# KDDI Kyocera A5521K Front LCD Screen Replacement

Written By: Dominic Grisafe

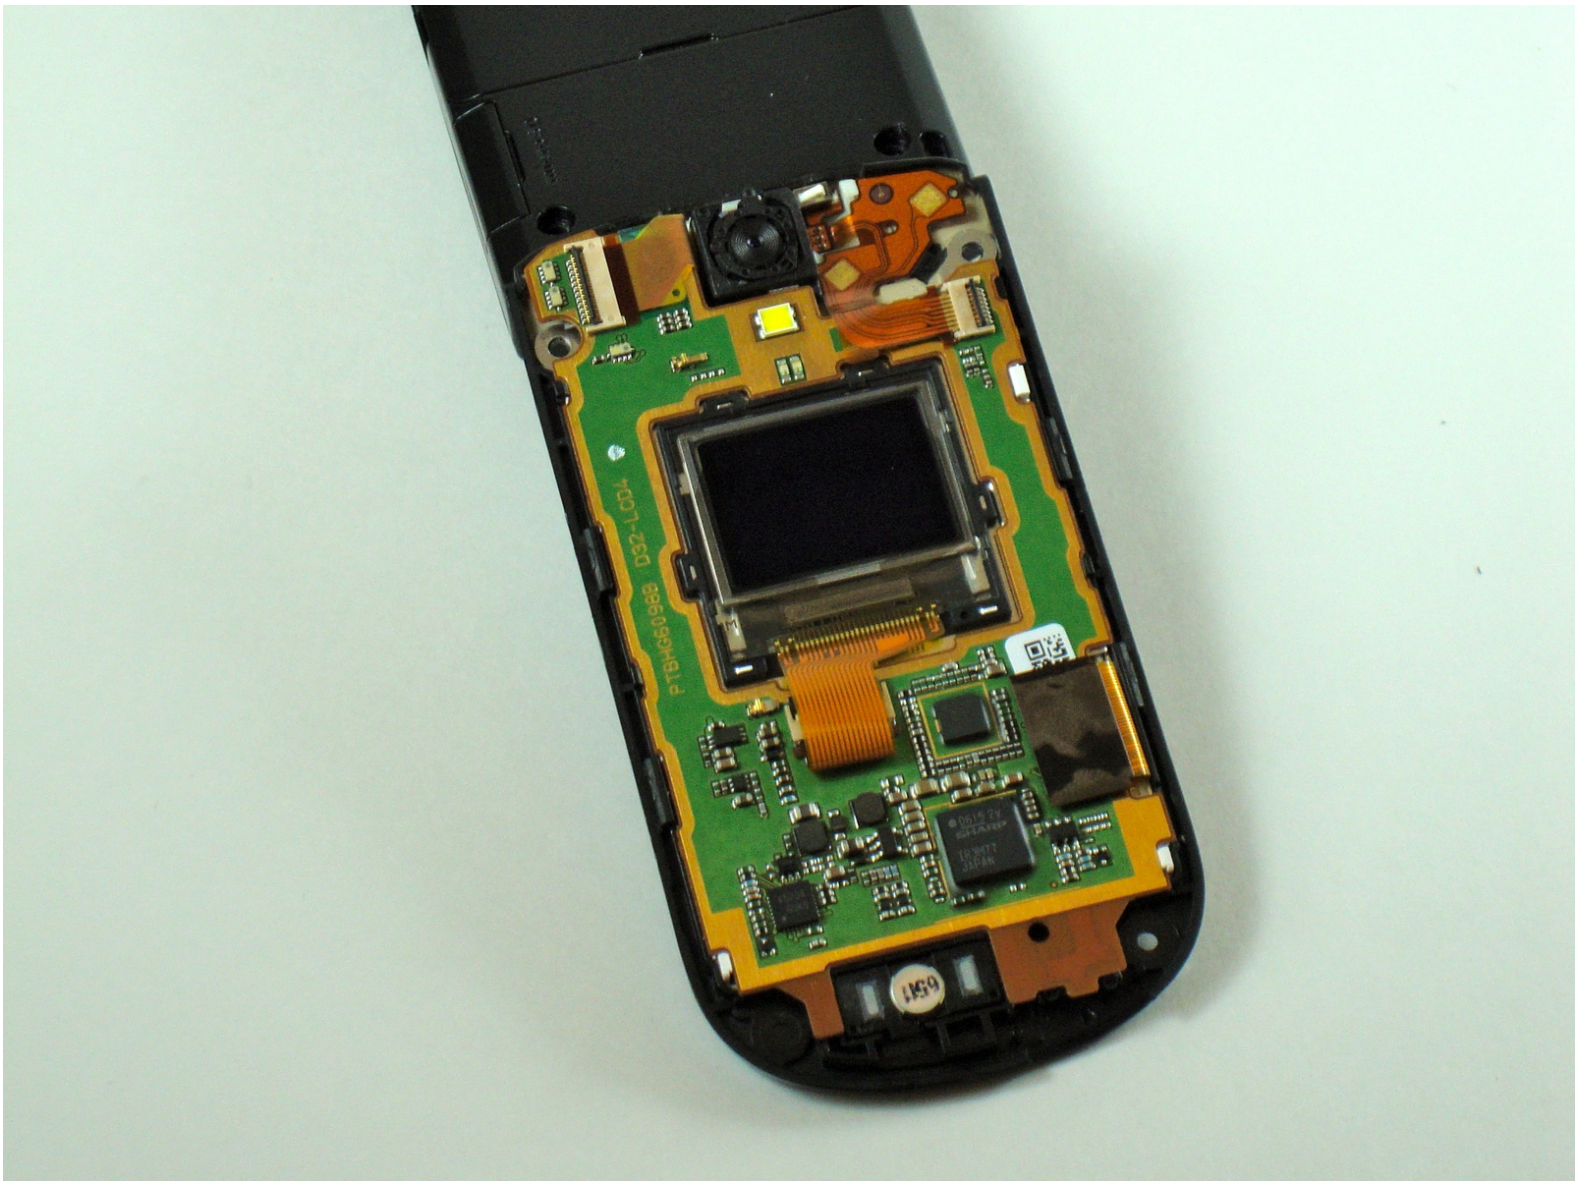

## INTRODUCTION

These instructions will demonstrate how to remove the front LCD screen from the KDDI Kyocera A5521K.

---




### TOOLS:

- [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Tri-point Y0 Screwdriver](#) (1)
  - [Push Pin](#) (1)
-



## Step 1 — Faceplate

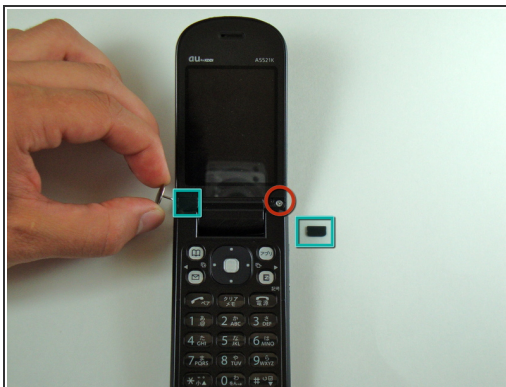

- Pry, with a metal probe, the black covers that are located by the pivoting joints of the phone.
- Beneath the covers are screws.

## Step 2



- Remove the screws using a Y0 screwdriver.

## Step 3



- Use the iPod pry tool to remove the outer screen.
    - Two screws are now visible.
- ⚠ Be careful not to crack the screen upon removal. It is adhered strongly to the phone.

## Step 4



- Use the Y0 screwdriver to remove the screws.



## Step 5




- Use the iPod pry tool to loosen the faceplate from the phone.
  - ⓘ Slide the pry tool along the entire crease of the faceplate to completely detach it.

## Step 6




- Separate the faceplate from the phone.

## Step 7 — Front LCD Screen

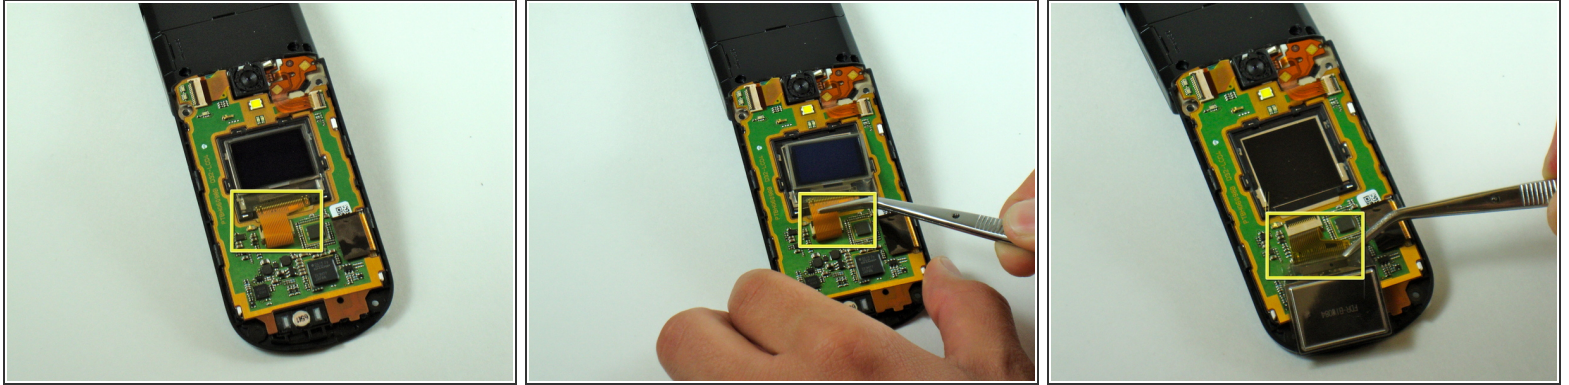

- Rotate the phone 180 degrees.
- Grab the flexible circuit with tweezers (or use your fingers if you can manage a firm grip).
- Pull the flexible circuit towards you to separate the front LCD screen from the phone.

## Step 8

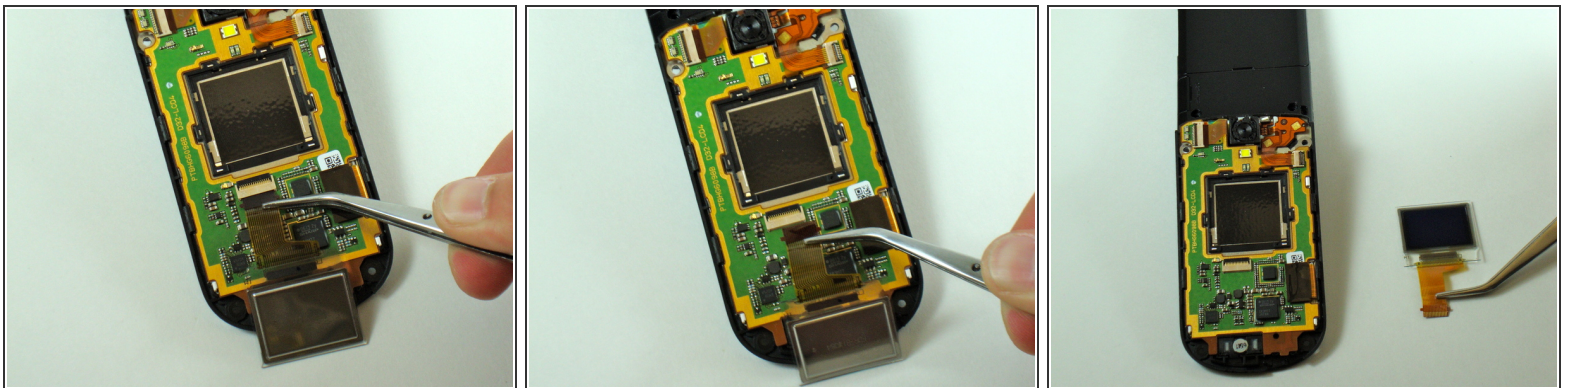

- Firmly pull the flexible circuit from the connector.
- ⚠ Be careful not to damage the flexible circuit.
- The front LCD screen should now be separate from the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-30 08:31:46 PM.